



THE MOTIVE SX1 LOUDSPEAKER

INSTRUCTIONS FOR USE

Congratulations on choosing the Neat Motive SX1 loudspeakers. Used correctly, they will provide a lifetime of beautiful music. Please read the following notes in order to get the best from them.

RUNNING IN

A 'running in' period of at least 200 hours is necessary to stabilise performance. After this period, a further gradual improvement will occur over a period of several weeks.

THE MOTIVE SX1 LOUDSPEAKER IS SUPPLIED FULLY ASSEMBLED. **BEWARE OF SPIKES!**

FIRST

- 1) Unpack and place loudspeaker in the appropriate listening position. (see "positioning" below)
- 2) Level by adjusting the spikes, then tighten locking rings firmly by hand.

CONNECTION

The Motive SX1 can take 4mm banana plugs, spade connectors or bare wire. Ensure a tight fit for banana plugs. For bare wire or spade connections, ensure that the binding post outer part is screwed down tight.

Take care to ensure correct phasing (i.e. red and black connections maintained at amplifier and speaker).

POSITIONING

Important note: Best listening results will be obtained without the grilles!

Due to huge variations in the acoustic properties of different rooms, there are few hard and fast rules governing loudspeaker positioning so experimentation is recommended. Generally, bass output increases as distance from the rear wall, or side wall, decreases. Stereo depth improves as the speaker is brought away from room boundaries. Start with the Motive SX1 at approx. 20cm from the rear walls, with at least 50cm from side walls, and make incremental moves in different directions, noting the changes, until an optimal position is reached. Remember that sometimes very small movements of the loudspeaker can bring about huge differences in performance.

MAINTENANCE

The Motive SX1 has no user-replaceable parts and requires no maintenance.

To clean the cabinet, brush lightly with a dry sponge. The bass/midrange cone can be cleaned by GENTLY using a soft, very lightly damp cloth. Do not touch the tweeter diaphragm. Should a fault condition arise, consult your dealer.

WARRANTY

The Motive SX1 is guaranteed against defects in materials and workmanship for a period of five years.

SPECIFICATIONS

ENCLOSURE TYPE	2.5-way bass reflex.
DIMENSIONS	920/160/200mm (HxWxD).
PLINTH FOOTPRINT	220 X 260 mm. (WxD)
WEIGHT	14 Kg. each. (SHIPPING WEIGHT: 30kg. pr.)
SENSITIVITY (2.83v/1m)	87 dB/1 watt.
RECOMMENDED AMPLIFIER POWER	25 to 150 watts.
IMPEDANCE	6 ohms

(Specification may be subject to change without notice)